

# travelgenie

N100



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio



[www.worldsim.com](http://www.worldsim.com)  
+44(0) 208 819 2557

## 07 Messages

- 7.1 Enter Text
- 7.2 SMS
- 7.3 Messages Settings
- 7.4 MMS
- 7.5 View MMS
- 7.6 Broadcast Messages

## 08 Personalize Your Phone

- 8.1 Dual SIM Cards
- 8.2 Change the Language
- 8.3 Set the Date and Time
- 8.4 Customize the Display
- 8.5 Customize User Profiles
- 8.6 Set Security Features

## 09 Get Organized

- 9.1 Contacts
- 9.2 Personal Organizer

## 10 Use Bluetooth

- 10.1 Connect the Bluetooth Headset
- 10.2 Other Bluetooth Functions
- 10.3 Bluetooth Settings

## 11 Multimedia On Your Phone

- 11.1 Install a Memory card
- 11.2 Take photos
- 11.3 Record Videos
- 11.4 Record Audio Clips
- 11.5 Play Music

11.6 Listen to FM Radio

11.7 Slide Show

## 12 More Features

- 12.1 Access the Web
- 12.2 Applications
- 12.3 Back-up Phone Data
- 12.4 Reset the Phone

# 01 02

- **Safety Information**
- **Other Guidelines  
for Phone Use**



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio

# Safety Information

Use your phone in a safe and responsible manner.

## ■ Normal use

Use your phone only in its normal position: place near the ear with the antenna pointing over the shoulder.

## ■ When driving

Using a hand-held mobile device while driving may be dangerous. Park your vehicle, or use a hands-free headset or speaker phone.

## ■ Near medical equipments or devices

Switch off your phone as it may affect the performance of medical equipments and medical devices. Follow all regulations and warnings in hospitals and other health-care facilities.

## ■ With pacemakers

Keep your phone with a minimum separation of 15cm from the pacemaker. If you suspect any interference is taking place, switch off your phone immediately.

## ■ In potentially explosive areas

Switch off your phone at refueling points (service stations) or other potentially explosive areas. Obey all warning signs and instructions.

## ■ In an aircraft

Switch off your phone as it may interfere with electronic equipments on an aircraft.

## ■ **Interference**

All mobile phones are subject to radio frequency interference which may affect their performance.

## ■ **Emergency calls**

To make emergency calls, the phone must be switched on and in service. If needed, press the End key to clear other functions. Then dial the emergency number and press the Send key. Emergency calls will not end until you hang up.

## ■ **Specific Absorption Rate (SAR) certification**

Your phone meets international standards that limit exposure to radio waves. The recommended SAR limit for mobile phones is 2.0 watts/kilogram (W/kg).

**The highest SAR values of the N100 Convertible are 0.322 W/kg for DCS and 0.665 W/kg for GSM. During normal use, the SAR level can be well below the maximum as the phone is designed to operate at the lowest power required to reach the nearest base station.**

**CAUTION :** Listening to a headset at high volume can damage your hearing. Use only the minimum volume setting necessary to hear the voice or listen to music.

## Other Guidelines for Phone Use

- Back up the data from your phone to your computer or other media regularly.
- Keep your phone and its accessories out of reach of young children.
- Avoid your phone to get wet. It is not waterproof.
- Clean the phone with a soft cloth slightly dampened with a mild soap solution. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Rough handling can damage internal circuit boards. Treat your phone with care.
- Keep your phone away from dusty and dirty areas.
- Keep your phone away from very hot or very cold areas.
- Do not paint your phone. Paint can clog the parts and cause improper operation.
- Do not connect incompatible accessories or devices to your phone.
- The acceptable ambient temperature for the N100 Convertible is as follows:  
Charging: 0°C to 45°C  
Discharging: -20°C to 45°C

# 03

## ■ Get Started

- 3.1 What's in the Box
- 3.2 Assemble Your Phone
- 3.3 Charge the Battery



Dual SIM



Shake to  
Switch SIM

 
 
 
 
 


Camera  
1.3 Mpx



FM radio

## 3.1 What's in the Box

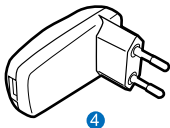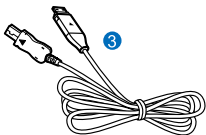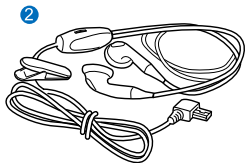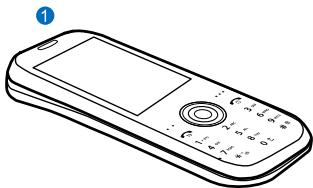

**The items included may vary depending on your service provider or region.**

 
1. Mobile Device
2. USB Ear-mic
3. USB Cable
4. Travel Adapter
5. Battery

### Dual-SIM mode


Your N100 Convertible allows you to install and use two SIM cards at the same time. You can change SIM preferences to choose one-card or dual-card mode. If you are installing only one SIM card, insert it in the slot labeled SIM1.

**NOTES: Accessory contents may differ by countries**


## 3.2 Assemble Your Phone

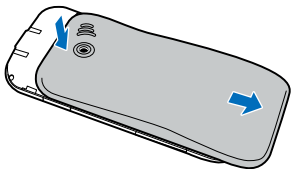

 
1. Remove the back cover.

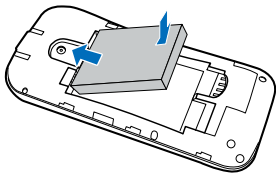

 3. Insert the battery.

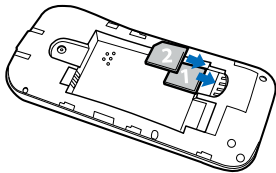


 2. Insert the SIM card(s).

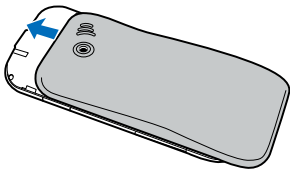

4. Replace the back cover.

### 3.3 Charge the Battery

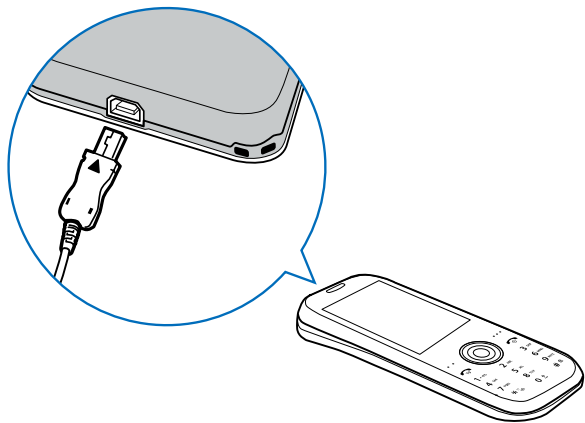 

To charge the battery for the first time, use the power adapter. It will take about three hours.

Your mobile phone can also be charged using the USB cable provided. Charging via the USB cable is not as effective as charging from a power outlet.

# 04

## ■ Phone Basics

- 4.1 Parts of the Phone
- 4.2 Switching the Phone On / Off
- 4.3 If You Have Two SIM Cards
- 4.4 Shake To Switch SIM
- 4.5 Basic Use



Dual SIM



Shake to  
Switch SIM

 


Camera  
1.3 Mpx





FM radio
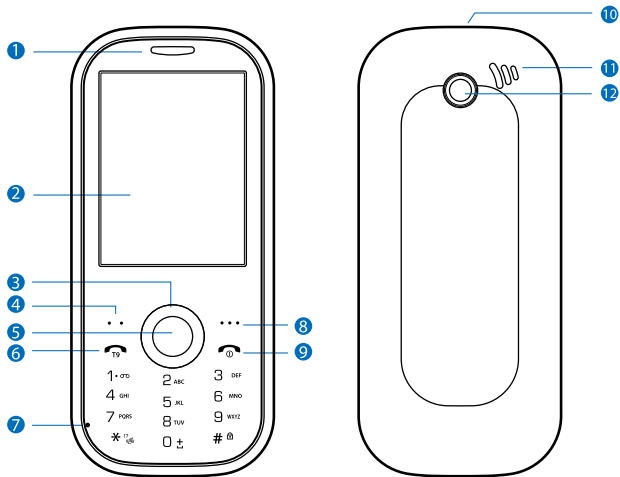
## 4.1 Parts of the Phone



- |                           |                        |                             |
|---------------------------|------------------------|-----------------------------|
| 1. Earpiece               | 5. Mainmenu / Ok Key   | 9. Power / End Key          |
| 2. Display                | 6. Send Key            | 10. Multifunction Connector |
| 3. Navigation Key (4-way) | 7. Mouthpiece          | 11. Speaker                 |
| 4. Left Selection Key     | 8. Right Selection Key | 12. Camera Lens             |

## 4.2 Switch The Phone On/Off

1. To switch the phone on, press and hold the  **Power key**.
2. If a PIN code is needed, enter it and tap **OK**. Be careful not to enter the PIN incorrectly three times in a row as it will block your SIM card. To switch off the phone, press and hold the  **Power key** again.

 
## 4.3 If You Have Two SIM Cards

When two SIM cards are installed, both will be powered on and active. SIM1 is the default line for all outgoing calls and messages.

To change these defaults, see “**Dual SIM Cards**” on page 30.


## 4.4 Shake To Switch SIM

This model N100 Convertible comes with Default SIM Selection (DSS) feature, which allows you to switch between two phone lines for making calls and sending SMS text messages. The SIM 1 line is selected by default for which you can configure phone settings, such as ringtone, wallpaper and user profile. In order to switch the default SIM line from SIM 1 to SIM 2 or vice versa, you may simply shake the phone, then the default SIM line will be switched over to the other SIM line after a short vibration and a pop-up message informing the change of default SIM line.

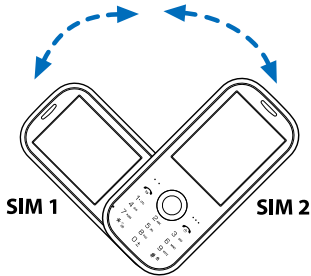

## 4.5 Basic Use

### ■ Make a call

Enter the number and press the  (**Send key**). During a call, press the Center selection key to use the speaker phone and adjust the volume control.

### ■ Answer a call

Press the  (**Answer key**).

### ■ End a call

Press the  (**End key**).

### ■ Send a text message

Press the **Navigate key [Left]** to compose a text message.

### ■ Change ringtones and alerts

Select **Menu** >  **User Profiles**

to customize and activate any of the user profiles. You can set the ringtone, volume, alert type, and other options (see page 32).

### ■ Switch to silent mode


To quickly switch to Silent mode, press and hold the **star (\*) key**.

Press and hold the **star (\*) key** again to return to the default profile.

### ■ Lock/unlock the keypad

To lock the keypad and prevent any accidental operation, press and hold the hash (**#**) **key**

To unlock the keypad, press the **unlock key**. You can also set the keypad to lock automatically after a specified interval if there is no activity.

Select  (**Settings**) > **Security** > **Auto keypad lock**.

# 05

## ■ **Navigate the Phone Menu**

- 5.1 Standby Mode
- 5.2 Menu
- 5.3 My Shortcuts
- 5.4 What the Status Icons Mean



Dual SIM



Shake to  
Switch SIM

 


Camera  
1.3 Mpx




FM radio


## 5.1 Standby Mode

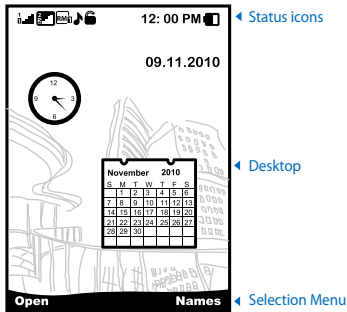

## 5.2 Menu

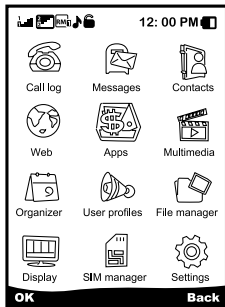 

 Press the **Menu** to display the menu icons

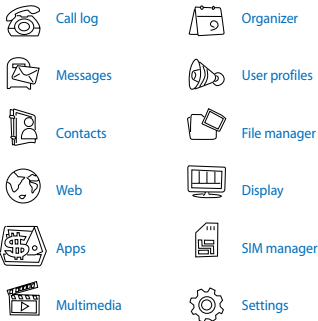


## 5.3 My Shortcuts

### ■ Keypad Shortcuts

#### Navigation key

 Navigate [Left]	Write
Navigate [Right]	Calendar
Navigate [Up]	Media player
Navigate [Down]	Camera

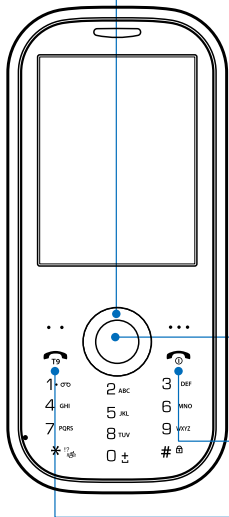

#### Center selection key

Press the **Center selection key** to access the Menu.






 



#### End key










Keylock / Screen Off Function

#### Send key

Press the Send key to access the Call log.

## 5.4 What the status icons mean

Icon	Definition
	2 SIM card 1 activated only
	2 SIM card 2 activated only
	2 Default line selected to SIM 1
	2 Default line selected to SIM 2
	Incoming message
	Missed call
	Incoming call with music
	Incoming call with music and vibration
	Incoming vibration

Icon	Definition
	SIM card 1 roaming
	SIM card 2 roaming
	Keypad unlocked
	Keypad locked
	Battery power level
	Bluetooth activated
	GPRS activated
	EDGE activated
	Alarm activated

# 06

## ■ Make / Receive Calls

- 6.1 Make Calls
- 6.2 Go Hands-Free
- 6.3 Receive Calls
- 6.4 Customize Call Settings
- 6.5 View Call Log



Dual SIM



Shake to  
Switch SIM





Camera  
1.3 Mpx



FM radio

## 6.1 Make Calls

<b>Make a call</b>	Enter the number and press the  <b>Send key</b> .
<b>Make an International call</b>	Hold down the <b>0 key</b> till the + symbol appears on the screen. Then enter the country code and phone number.
<b>Redial a number</b>	Hold down the  <b>Send key</b> to display the Call Log and select the number.
<b>Speed dial a number</b>	Press and hold the assigned key ( 2 to 9).
<b>Call from contacts</b>	Select <b>Names</b> to display your contacts.

### ■ Select the SIM card for a call

- Calls are made through the selected default SIM line.
- To select a different SIM card for a call, select Options > Dial.
- To change the default SIM card, see "Dual SIM Cards" on page 30.

### ■ During a call

To increase or decrease the volume, press the Navigation key up or down respectively.

#### **Options during a call include:**

- Place the call on hold, mute the call, or end the call.
- Call another number
- Browse the phonebook.
- Send a message.

## 6.2 Go Hands-Free

<b>Speaker phone</b>	During a call, press the <b>Left selection key</b> to activate the speaker. To return to normal call mode, press the <b>Left selection key</b> again.
<b>Bluetooth headset</b>	See <b>"Use the Bluetooth Headset"</b> on page 38.
<b>Other headset (optional accessory)</b>	Plug the headset into the multifunction connector at the top (USB socket) of the phone. The phone will detect it automatically.

## 6.3 Receive Calls

<b>Answer a call</b>	Press the <b>Send key</b> .
<b>Reject a call</b>	Press the <b>End key</b> .
<b>Mute the ringtone</b>	Press the <b>Center selection key</b> or by turning the phone over.

To answer a call using any key, select the Answer mode setting in a user profile. See **"Customize User Profiles"** on page 32.

## 6.4 Customize Call Settings

Select  (**Settings**) > **Call settings** to customize the following:

- SIM1 or SIM2 call settings such as caller ID display, call waiting, and call divert (depending on your service provider).
- Auto redial - Choose whether to redial unsuccessful calls automatically.
- Call time display - Display the duration of completed calls.
- Call time reminder - Activate a reminder when a call exceeds a specified duration.
- Auto quick end - End a call after a specified duration.
- Reject by SMS

## 6.5 View Call Log

Select  > (**Call log**) to view the following:

- Recent calls made, received, and missed.
- Call duration.
- Number of messages sent and received.
- Amount of data sent and received.

You also have the option to clear the call lists and reset the counters.

# 07

## ■ Messages

- 7.1 Enter Text
- 7.2 SMS
- 7.3 Messages Settings
- 7.4 MMS
- 7.5 View MMS
- 7.6 Broadcast Messages



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio

## 7.1 Enter Text

*The N100 Convertible supports sending and receiving text (SMS), multimedia (MMS), and email messages. For subscription to these services, contact your service provider.*

### ■ Enter text

Use the keypad to enter text.

### ■ Text input with the keypad

- Press a number key (2 to 9) repeatedly until the desired character appears.
- Press 0 to add a space.

### ■ Predictive text input (T9)

1. Press a number key only once for each letter (for example, to enter 'cat' press 2,2, and 8). Word choices are displayed and change as you press each key.
2. Press the Navigation key **[Up]** or **[Down]** to scroll through the word choices. Press the Center selection key to select the word you want.

### ■ Shortcuts

*You can use the following shortcuts:*

<b>Send key</b>	Enable or disable T9 input.
<b>Hash (#) key</b>	Switch between uppercase and lowercase input.
<b>Start (*) key</b>	Insert special characters.

**Options depend on the message type. They include:**

- Paste text from a template.
- Add pictures and insert symbol.
- Format the message.
- Insert contact names or numbers from the phonebook.
- Send the message from SIM1 or SIM2.

## 7.2 SMS

Menu >  (Messages) > SMS

### ■ Send SMS

1. Select **Create message**.
2. Compose your message.
3. Select **Send options** and send the message.

### ■ View SMS

*Messages are organized as follows:*

<b>Inbox</b>	Incoming messages
<b>Sent items</b>	Successfully sent messages
<b>Outbox</b>	Draft messages
<b>Templates</b>	Often-used text to be added to your message

## 7.3 Message Settings

Select **Message Settings** to:

- Set preferred storage (phone or SIM card)
- View the amount of memory used.
- Define SMS profiles, if needed.

They specify the message center number, message type and validity period.

- Activate voicemail server.

## 7.4 MMS Menu > (Messages) > MMS

### ■ Send MMS

1. Select **Write message**.
2. Enter the number or email address of the recipient(s) and a subject.
3. Compose your message.
4. Select **Options** to add multimedia files. You can also add more slides. A Preview options lets you view the MMS before sending.
5. When finished, select Done to select Save and Send options.

## 7.5 View MMS

*Message are organized as follows:*

<b>Inbox</b>	Incoming messages
<b>Outbox</b>	Outgoing messages that have not been sent yet
<b>Drafts</b>	Incomplete messages
<b>Templates</b>	Templates you created as well as predefined templates.

*Select Message settings to:*

- Set preferences for composing messages and define your signature.
- Define how the phone sends and retrieves messages.
- Filter messages.
- Define MMS server profiles, if needed. They specify account details and connection type.
- View the amount of memory used.

## 7.6 Broadcast Messages

*Selection Menu >  (Messages) > Broadcast messages*

**Broadcast messages are broadcast to mobile phones within a specific service area.**

**They include traffic reports, weather information, and advertisements. You can:**

- Choose whether to receive info messages and filter them by language.
- Select channels to filter messages by subject.

# 08

## ■ Personalize Your Phone

- 8.1 Dual SIM Management
- 8.2 Change the Language
- 8.3 Set the Date and Time
- 8.4 Customize the Display
- 8.5 Customize User Profiles
- 8.6 Set Security Features



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio

## 8.1 Dual SIM Management

Select Menu >  (SIM manager)

### ■ Dual SIM Cards

When two SIM cards are installed, both will be powered on and active, in which SIM1 is the default line for all outgoing calls and messages. When you return a call or reply to a message, it will be sent from the same SIM line that the call or message was received on. You can change the SIM settings as described below.

### ■ Select active SIM card(s)

You can choose to have both SIM cards active, only one active, or both powered off and inactive (flight mode).

1. Select **Dual SIM Settings**.
2. Select your preferred option and tap **OK**.

### ■ Select default SIM card

1. Select **SIM Manager**
  2. Select the **SIM Manager** - set **default SIM** and tap **OK**.
- The selected SIM will be the default line for all outgoing calls and messages.

### ■ Select SIM card for a call or message

If you don't want to use the default SIM for a particular call or message, do the following:

- When calling, **Option**> **Call**, then can select SIM1 or SIM2
- When sending a message, press **Options** > **Send text message**, and then select SIM1 or SIM2

## 8.2 Change the Language

Select **Menu** >  (**Settings**)

You can change the phone language as well as the writing language for composing messages.

## 8.3 Set the Date and Time

Select **Menu** >  (**Settings**)

Select **Time & Date** to set your time zone, preferred date and time formats, as well as the date and time. The N100 Convertible can synchronize the date and time with your service provider. To do so, set **Settings** > **Auto update of date and time to On**.

## 8.4 Customize the Display

Select **Menu** >  (**Display**)

Select Display to do the following:

- Wallpaper can be saved separately by SIM1 and SIM2.
- Select the wallpaper, screen saver and Power On/Off display. You can choose from images provided by the phone or your own images.
- Choose whether to display the date and time, and your phone numbers on the wallpaper.
- Choose the language you like.
- You can write the greeting text such as Welcome, Hello;Ketc or any text you like.
- Select LCD to set the brightness of the display. The phone automatically dims the display after a specified interval (up to 60 seconds) if there is no activity.
- Choose the Clock type.
- Show owner number.

## 8.5 Customize User Profiles

Select Menu >  (User profiles)

*A user profile defines the tone setting, volume, alert type, ring type, extra tone, answer mode, and other options.*

1. Select **User profiles** to display a list of predefined profiles.
2. Select a profile to activate or customize it.

**Note: The Headset and Bluetooth profiles are automatically activated when you connect a wired headset or a Bluetooth headset respectively.**

The settings that can be customized are:

- **Tone settings** - The ringtones for incoming calls and messages, as well as keypad tone.
- **Volume** - The ringing volume and keypad tone volume.
- **Alert type** - Ring, vibrate, or a combination of both.
- **Incoming call alert** - Play the ringtone once, repeatedly, or with increasing volume.

- **Extra tone** - Choose to play additional alerts, for example, to indicate a warning or error.
- **Answer mode** - Answer a call using any key.

## 8.6 Set Security Features

Select Menu >  (Settings) >

**Security settings**

**Select Security to set the following:**

- SIM card security - Lock the SIM card with a password to prevent unauthorized use, allow outgoing calls to selected numbers only, or prevent outgoing calls to selected numbers.
- Lock the phone with a password to prevent unauthorized use. To enable this feature for the first time, enter **0000**. Then change the password.
- You can also set the phone to automatically lock the keypad. See
- Lock/unlock the keypad on page 16.

# 09

## ■ **Get Organized**

9.1 Contacts

9.2 Personal Organizer



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio

## 9.1 Contacts

*Selection Menu* >  (*Contacts*)


**Contacts can be saved to the SIM card or phone memory. The phonebook will show all the contacts from the SIM cards and phone. Only two details can be saved to a SIM card, name and phone number. More details can be stored in the phone memory, including multiple phone numbers, pictures, and video.**

### ■ Contact details to save

*Select Menu* >  (*Contacts*) > *Options*

You can choose the **Send message**, **Writing language**, **Speed dial**, **Call**, **IP dial**, **Send contact** and **Edit** for contact details in phonebook.

### ■ Default storage for contacts

*Select Menu* >  (*Contacts*) > *Options* > *Contacts settings*

- Select **Preferred storage** to define the default storage location for contacts: phone or SIM card.
- Select **Memory status** to see the number of contacts and available space.
- Select **Blacklist** to set blacklisted contacts list (up to max. 20 contacts).

### ■ Add a contact

1. Select **Add new contact**.
2. Choose where to save the new contact: phone or SIM card.
3. Enter details.

You can also save phone numbers from the call log or from messages (select the **Save option** from the **Options** menu).

## ■ Copy, move, or delete contacts

- From the **Contacts** menu, select **Copy** all to copy all contacts from the phonebook memory to a SIM card or vice versa.
- Search for a contact and select **Options** to find the **Copy, Move,** and **Delete** functions.

## ■ Create caller groups

*You can organize your contacts into caller groups such as family, friends, or business, and customize the attributes for each group.*

**Note: Only contacts from the phone memory can be added to caller groups.**

1. Select **Caller groups**.
2. Select the group to edit.
3. Choose the ringtone, picture, and video.
4. Select **Member list** and then **OK** to show the members in this group.
5. From the Member list, select **Options** to add and remove members.

## 9.2 Personal Organizer

Select **Menu** >  (**Organizer**)

*Use the personal organizer to keep track of events and tasks.*

### ■ **Calendar**

From the **Calendar - Options** menu:

Select **Add event** to add reminders, meetings, and other events. Each type of event lets you enter different details.

Select **View** and select date to view all events for that day.

Select **View all** to view all upcoming events.

### ■ **Tasks**

From the **Tasks** menu, to add your task with date and time. Create to add these different types of tasks, and set **Alarm** reminders for the tasks.

### ■ **Alarm clock**

1. Select any of the profiles to display the alarm settings.
2. Activate the profile by setting it to **On**.
3. Set the alarm time and other settings.
4. Select **Done**.

### ■ **World clock**

The world clock shows the current time for various cities around the world. Press the **< and >** key to scroll through the cities.

### ■ **Notes**

You could write any notes here for your memory.

# 10

## ■ Use Bluetooth

- 10.1 Connect the Bluetooth Headset
- 10.2 Other Bluetooth Functions
- 10.3 Bluetooth Settings



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio

Select Menu >  (Settings) > Bluetooth

**Select Power to enable or disable Bluetooth on your phone.**

*Bluetooth technology enables the N100 Convertible to connect to compatible devices within a range of 10 meters. Although the devices need not be in direct line of sight, the connection may be affected by other electronic devices or obstructions such as walls.*

**NOTE:** Make sure that the device you want to add has the Bluetooth function activated and visible.

## 10.1 Connect the Bluetooth Headset

### CAUTION

Listening to a headset at high volume can damage your hearing. Use only the minimum volume setting necessary to hear the conversation or music.

### ■ Register Bluetooth headset

The first time you use the Bluetooth headset, select **Bluetooth > My device to Search new device**. Then, **Register** the headset to pair it with the phone. The headset is automatically connected and ready for use. Subsequently, you will only need to use the Register headset option if you are having connection problems with the headset.

### ■ Connect or disconnect Bluetooth headset

Select **headset > Connect or Disconnect**.

## 10.2 Other Bluetooth Functions

### ■ Connect with audio devices

Select **Search audio devices** to automatically search for and connect with compatible audio devices (such as wireless headphones).

### ■ Connect with other devices

*To connect with other Bluetooth devices such as a notebook computer or another mobile phone:*

1. Select **My devices > Search new device** to enable your phone searches for and lists any Bluetooth devices in range.
2. Select a device and select **Pair** to connect.
3. You may be required to enter a pass code, depending on your authentication setting. Successfully paired devices are listed in My devices.
  - To share data with a paired device, select **Options > Connect**.
  - To disconnect a paired device, select **Options > Delete**.

## 10.3 Bluetooth Settings

### ■ Select settings for these Bluetooth options:

- **Visibility** - Choose whether to allow other Bluetooth devices to find and pair with your phone.
- **My name** - Rename your phone.
- **Audio path** - Choose whether to send audio to the Bluetooth headset.
- **Sharing permission** - Specify full control or read-only when sharing data with another device.

# 11

## ■ Multimedia on Your Phone

- 11.1 Install a Memory card
- 11.2 Take photos
- 11.3 Record Videos
- 11.4 Record Audio Clips
- 11.5 Play Music
- 11.6 Listen to FM Radio
- 11.7 Slide Show



Dual SIM



Shake to  
Switch SIM



 
Camera  
1.3 Mpx




FM radio

## 11.1 Install a Memory Card


*The camera and other multimedia features on the N100 Convertible require an external microSD memory card. SDHC is also supported.*

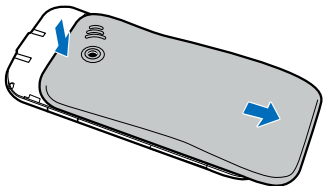

 1. Remove battery cover and battery.

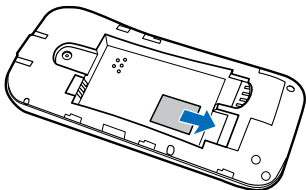

 2. Insert memory card with label facing up.

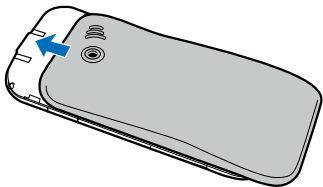

3. Replace the battery cover.

---

## 11.2 Take photos

1. Select **Camera**.
2. Press the **Center selection Key** to take a photo.
3. Press the Left selection key to save it.

---

### Change settings

From the **Options** menu, change camera settings, size and quality, lighting, and special effects.

---

### View photos

Select **Multimedia > Image viewer**  
From the Options menu, choose **View, Print, Browse style, Rename, Delete** and **Storage** location.  
You can use a picture or animation as a wallpaper or screen saver, attach it to a contact in the phonebook, or send it in an MMS.

---

## 11.3 Record Videos

1. Select **Video recorder**.
2. Press the **Center selection key** to start recording. Use it to pause and resume recording as well.
3. Press the Right selection key to stop and save the recording.

---

### Change settings

From the **Options** menu, change camcorder settings, size and quality, special effects, storage location.

---

### Check memory

Select **Options > Storage**.

---

---

## Play Videos

Select **Video player** to play video clips and movies.

---

## Options

You can use a video clip as a screen saver, or send it in an MMS.

---

## 11.4 Record Audio Clips

1. Select **Sound recorder**.
  2. To start recording, select **Options > Record**.
  3. Select **Stop** to stop recording.
- 

## Play audio clip

Select **Options > Play** to play an audio clip.

---

## Change settings

From the **Options** menu, select the recording format (AMR, WAV or AWB) and storage (phone memory or memory card).

---

## Other options

Use audio clips as ringtones for incoming calls, and send them in an MMS.

---

## 11.5 Play Music

Select **Media player** to play music.

---

## Change preferences

Select **Options > Settings** to change playback preferences.

---

## 11.6 Listen to FM Radio

1. Connect a headset to the multi-function connector at the top of the phone.
  2. Select **FM radio**.
- 

## Add radio channels

Auto search or manually input radio channels. You can save up to 9 FM radio channels.

---

## 11.7 Slide Show

Select **Slide show** to see the photos in slide format.

---

# 12

## ■ More Features

- 12.1 Access the Web
- 12.2 Applications
- 12.3 Back-up Phone Data
- 12.4 Reset the Phone



Dual SIM



Shake to  
Switch SIM



Camera  
1.3 Mpx



FM radio

## 12.1 Access the Web

Select Menu >  (Web)

*The N100 Convertible is equipped with a WAP browser for surfing the web. Availability of WAP services depends on your service provider. The WAP browser can access websites that use WML or XHTML. The appearance of the web pages may vary due to the limited display size.*

### ■ Set up your account

1. Select **(Web)** > **Connectivity** > **Data account**.
2. Select **an account** and edit the settings: enter the home page address, your user name, password, and other account settings (obtain the details from your service provider).

### ■ Internet Services

1. Select **(Web)** > **Internet Services**.
2. You could select **Homepage, Bookmarks, Input address, Stored pages, Settings** for your internet services control.

## 12.2 Applications

Select Menu >  (Apps)

*These applications are provided on the N100 Convertible:*

- Games
- E-Book reader
- Calculato
- Java & downloadable apps
- Currency converter

## 12.3 Back-up Phone Data

***Connect the N100 Convertible to your computer to explore the folders on your phone and back-up the data.***

1. Connect the phone to your computer using the USB cable provided.
2. Select **Mass Storage** on your phone.
3. On your computer, double-click **My Computer**. You should see a new removable disk.
4. Double-click the removable disk to browse the folders on your phone. The PCSuite folder on the phone contains an installer file that you can copy to your computer and run. It includes Windows drivers for the N100 Convertible and an application that lets you synchronize your phone data with your Windows applications.

## 12.4 Reset the Phone

***It may be necessary to reset the N100 Convertible from time to time.***

1. Switch off the phone.
2. Remove the battery and reinstall it a few seconds later.
3. Switch the phone back on.